


HOW TO MEASURE FOR YOUR NEW WOODEN DRIVEWAY GATE

Please call us on 0800 6124 965 if you have any questions or visit www.gatesandfencesuk.co.uk.

First, take THREE measurements between the pillars/ posts. Across the top, middle and bottom (as shown below).

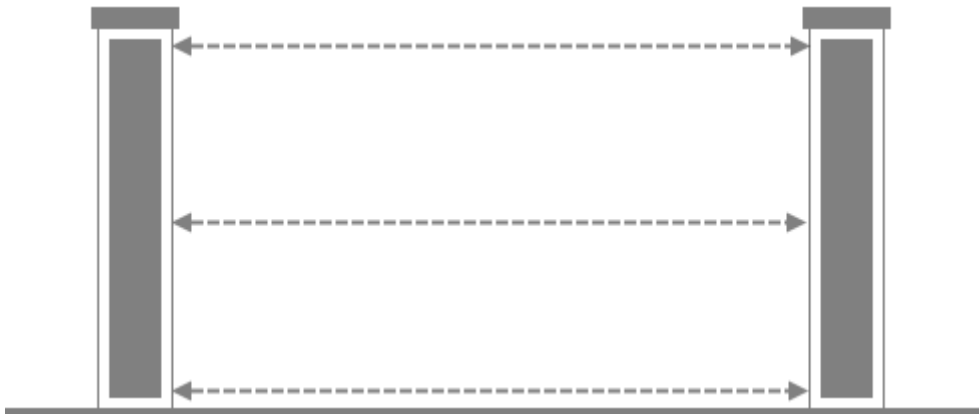

TOP:	MIDDLE:	BOTTOM:
------	---------	---------

Make a note of the SMALLEST measurement.

Next. Determine how the gates are going to open and reduce the clearance gap required from the smallest measurement.

FIGURE 1:

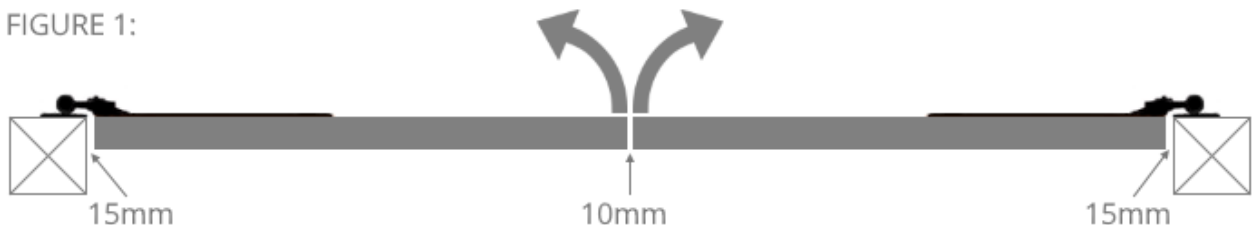


FIGURE 1: (most popular set up)

Gates to open towards driveway. Hinge plates mounted to rear face of post/ pillar. Back edge of gate sits flush with the back edge of post/ pillar.

REDUCE 40mm (approx. 1.5") from your lowest measurement.

Figure 2

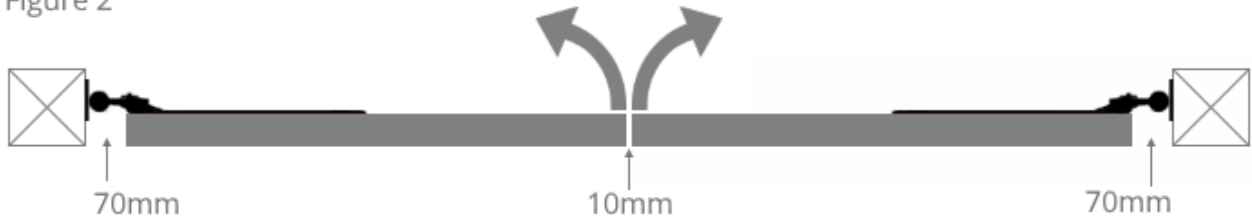


FIGURE 2:

Gates to open towards driveway. Hinge plates mounted to inside face of post/ pillar. Front edge of gate sits flush with the front edge of post/ pillar.

REDUCE 150mm (6") from your lowest measurement.

Figure 3

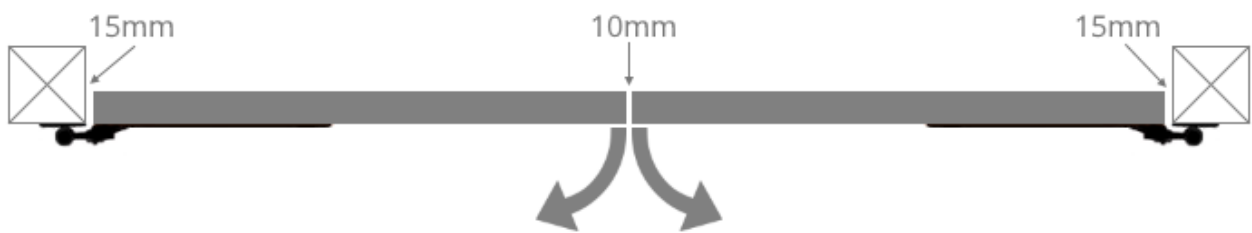


FIGURE 3:

Gates to open outwards toward roadside. Hinge plates mounted to outside front face of post/ pillar. Front edge of gate sits flush with the front edge of post/ pillar. This is a good set up to do if your driveway space is limited. If your gate opens over a public footpath, please check with your local council if permission is required.

REDUCE 40mm (1.5") from your lowest measurement.

Figure 4

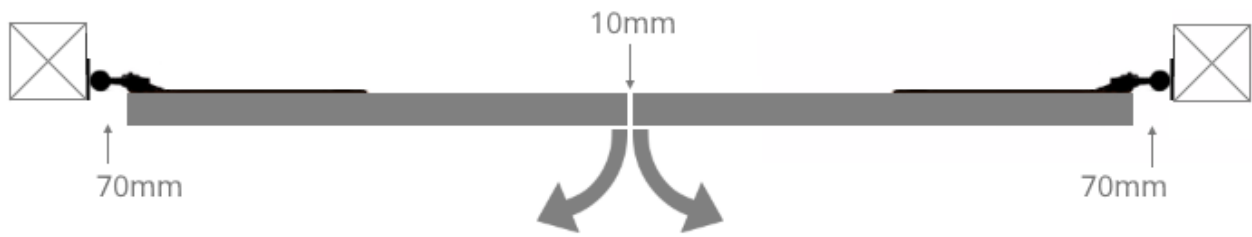


FIGURE 4:

Gates to open outwards toward roadside. Hinge plates mounted to side face of post/ pillar. Back edge of gate sits flush with the front edge of post/ pillar. This is a good set up to do if your driveway space is limited. If your gate opens over a public footpath, please check with your local council if permission is required.

REDUCE 150mm (6") from your lowest measurement.

If you have any questions, please call us direct on 0800 6124 965.

www.gatesandfencesuk.co.uk