



Gates & FENCES UK

HOW TO MEASURE FOR YOUR NEW FARM/ FIELD GATE

Please call us on 0800 6124 965 if you have any questions or visit www.gatesandfencesuk.co.uk.

First, take THREE measurements between the pillars/ posts. Across the top, middle and bottom (as shown below).



TOP:	MIDDLE:	BOTTOM:
------	---------	---------

Make a note of the SMALLEST measurement.

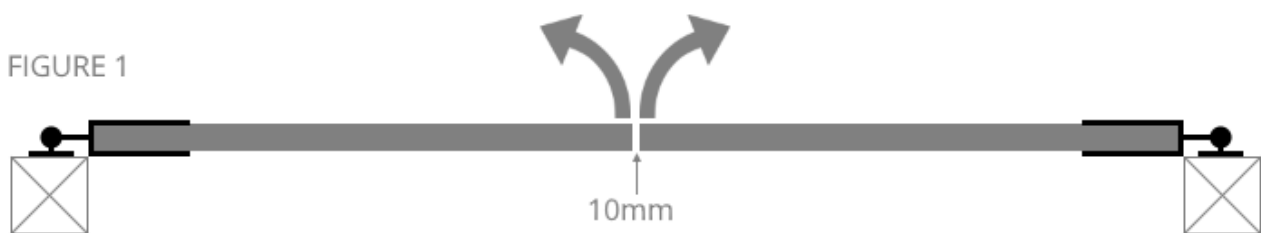


Figure 1: This set up is for a double leaf farm/ field gate. As the hinges are mounted to the rear of the post, the only reduction that is required is where the gate meets to open/ close. Gate opens inwards towards property.

Therefore, reduce lowest measurement by 10mm.

FIGURE 2



Figure 2: This set up is for a single leaf farm/ field gate. As the hinges are mounted to the rear of the post you do not need to reduce any size from your lowest measurement. Gate opens inwards towards property.

FIGURE 3

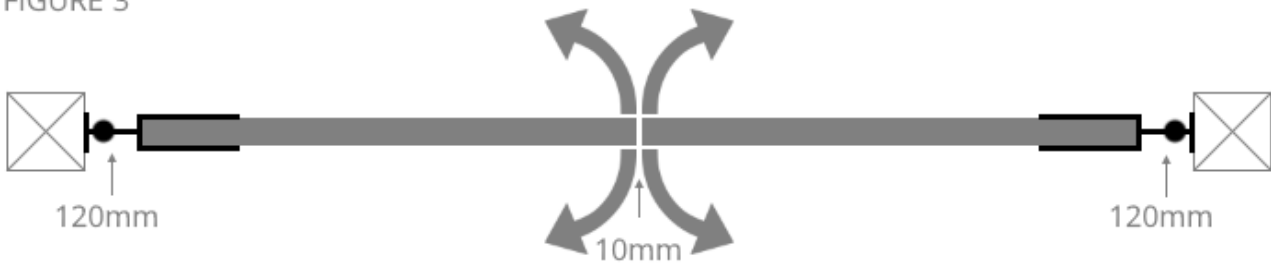


Figure 3: This set up is for a double leaf farm/ field gate. The hinges are mounted to the inner face of the posts. This allows the gate to open both ways.

Reduce 250mm (approx. 10") from your lowest measurement.

FIGURE 4



Figure 4: This set up is for a single leaf farm/ field gate. The hinges are mounted to the inner face of the posts. This allows the gate to open both ways.

Reduce 130mm (approx. 5 1/5") from your lowest measurement.

If you have any questions, please call us direct on 0800 6124 965.
www.gatesandfencesuk.co.uk